
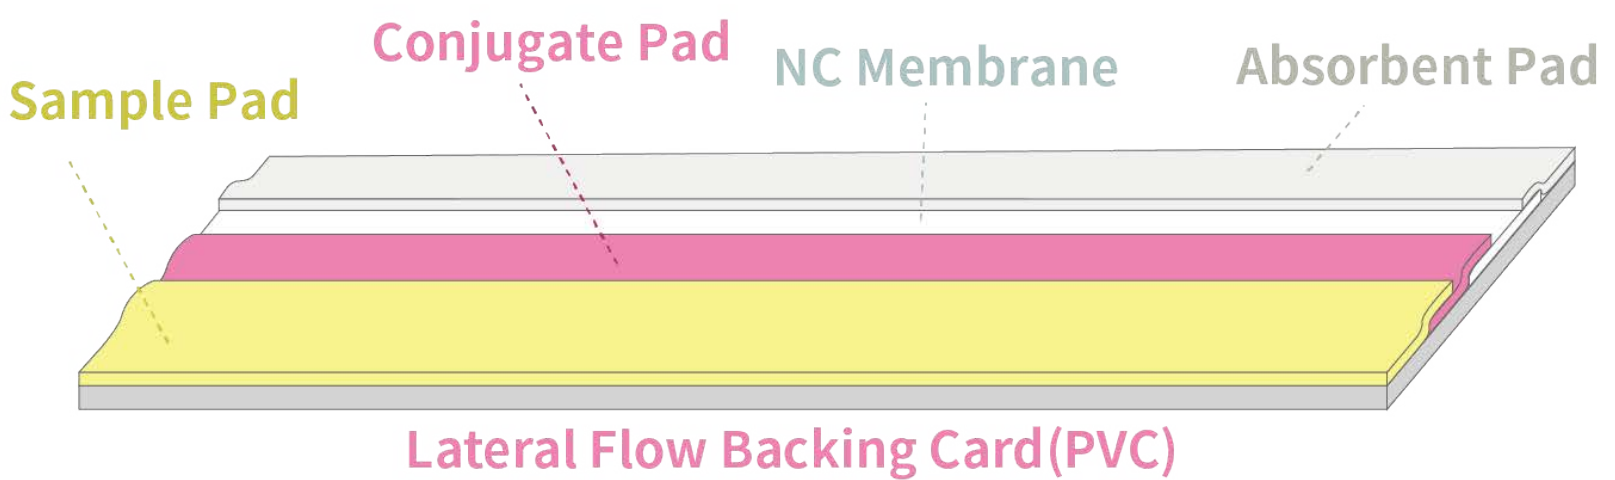
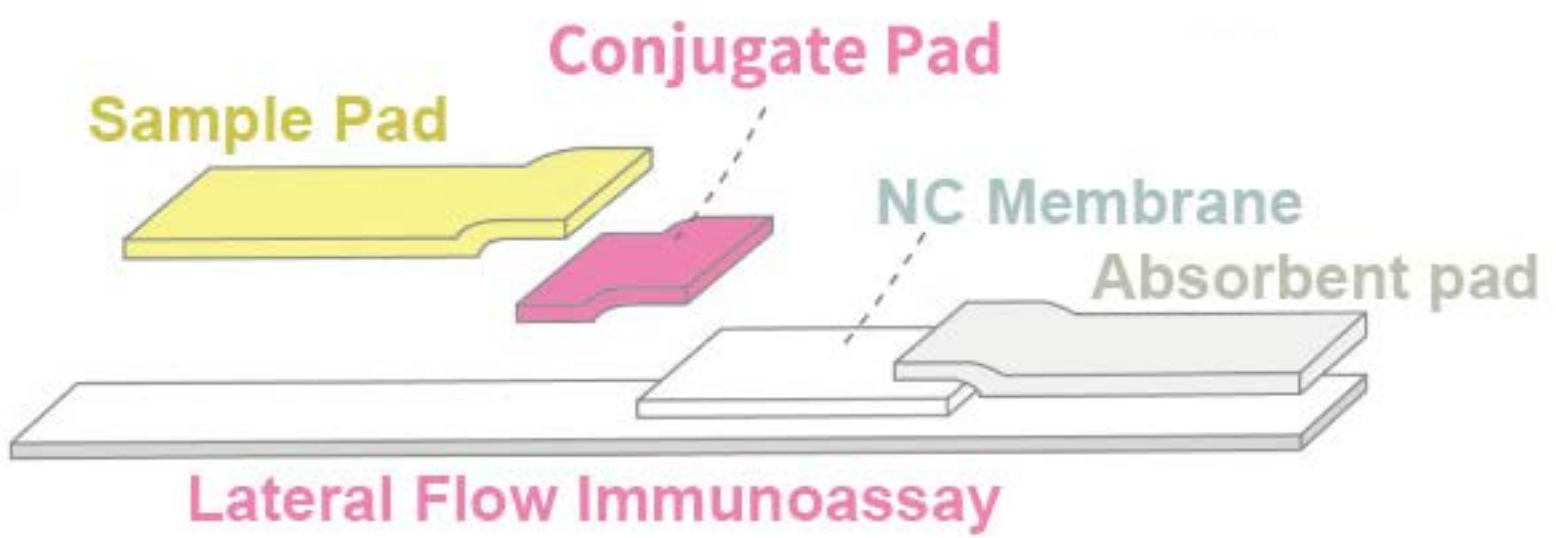
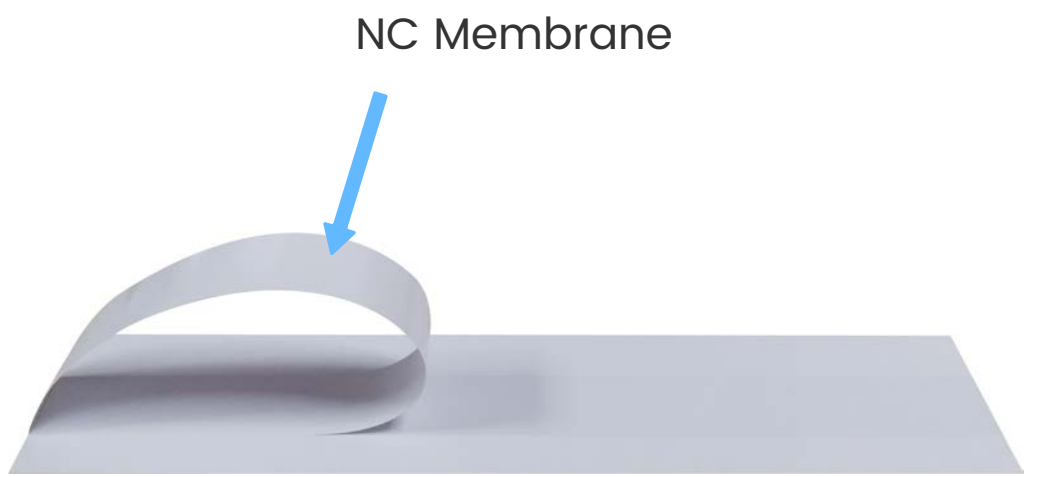


NC Membrane Laminator

For Lateral Flow Membrane Lamination

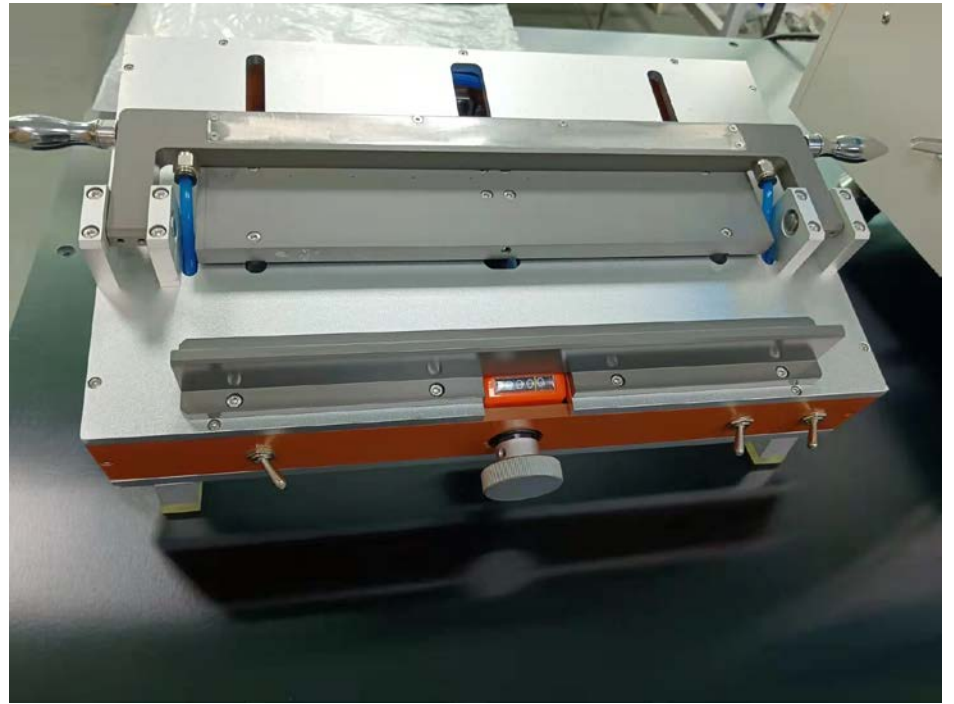

Principle:

Use vacuum adsorption and fixation to complete the flipping and bonding of the lateral flow membrane lamination and lateral flow backing card.

Workflow:

1. Feed lateral flow membrane (NC membrane)
2. Feed lateral flow backing card
3. Lamination

Features:

1. Easy to use for lateral flow membrane lamination
2. High precision
3. Low cost
4. Small size
5. Bench top equipment
6. Increase work efficiency

Parameter	
Dimension	480(L) * 300(W) * 100(H)mm
Weight	20kg
Precision	0.1mm
Air supply	6 Bar