
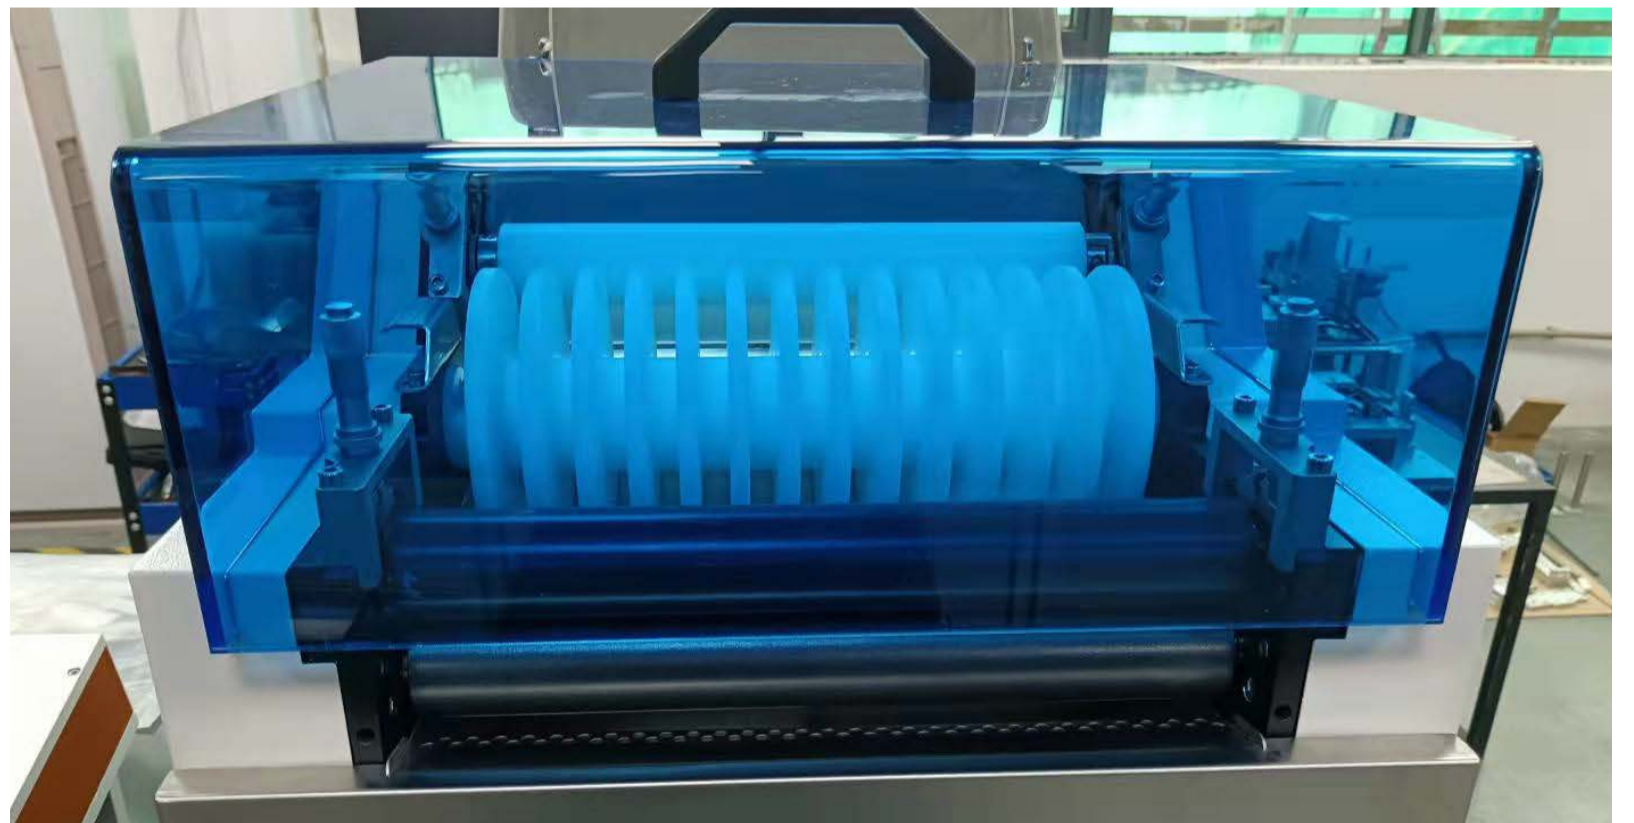
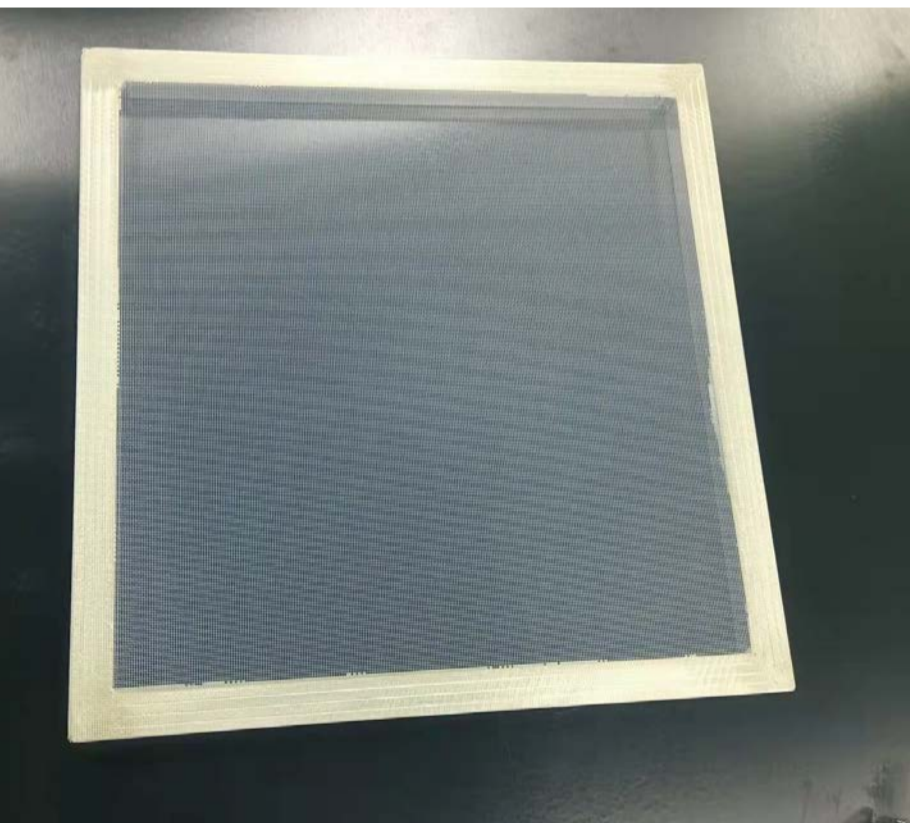


Sample Pad Treatment Machine

For lateral flow test strip manufacturing

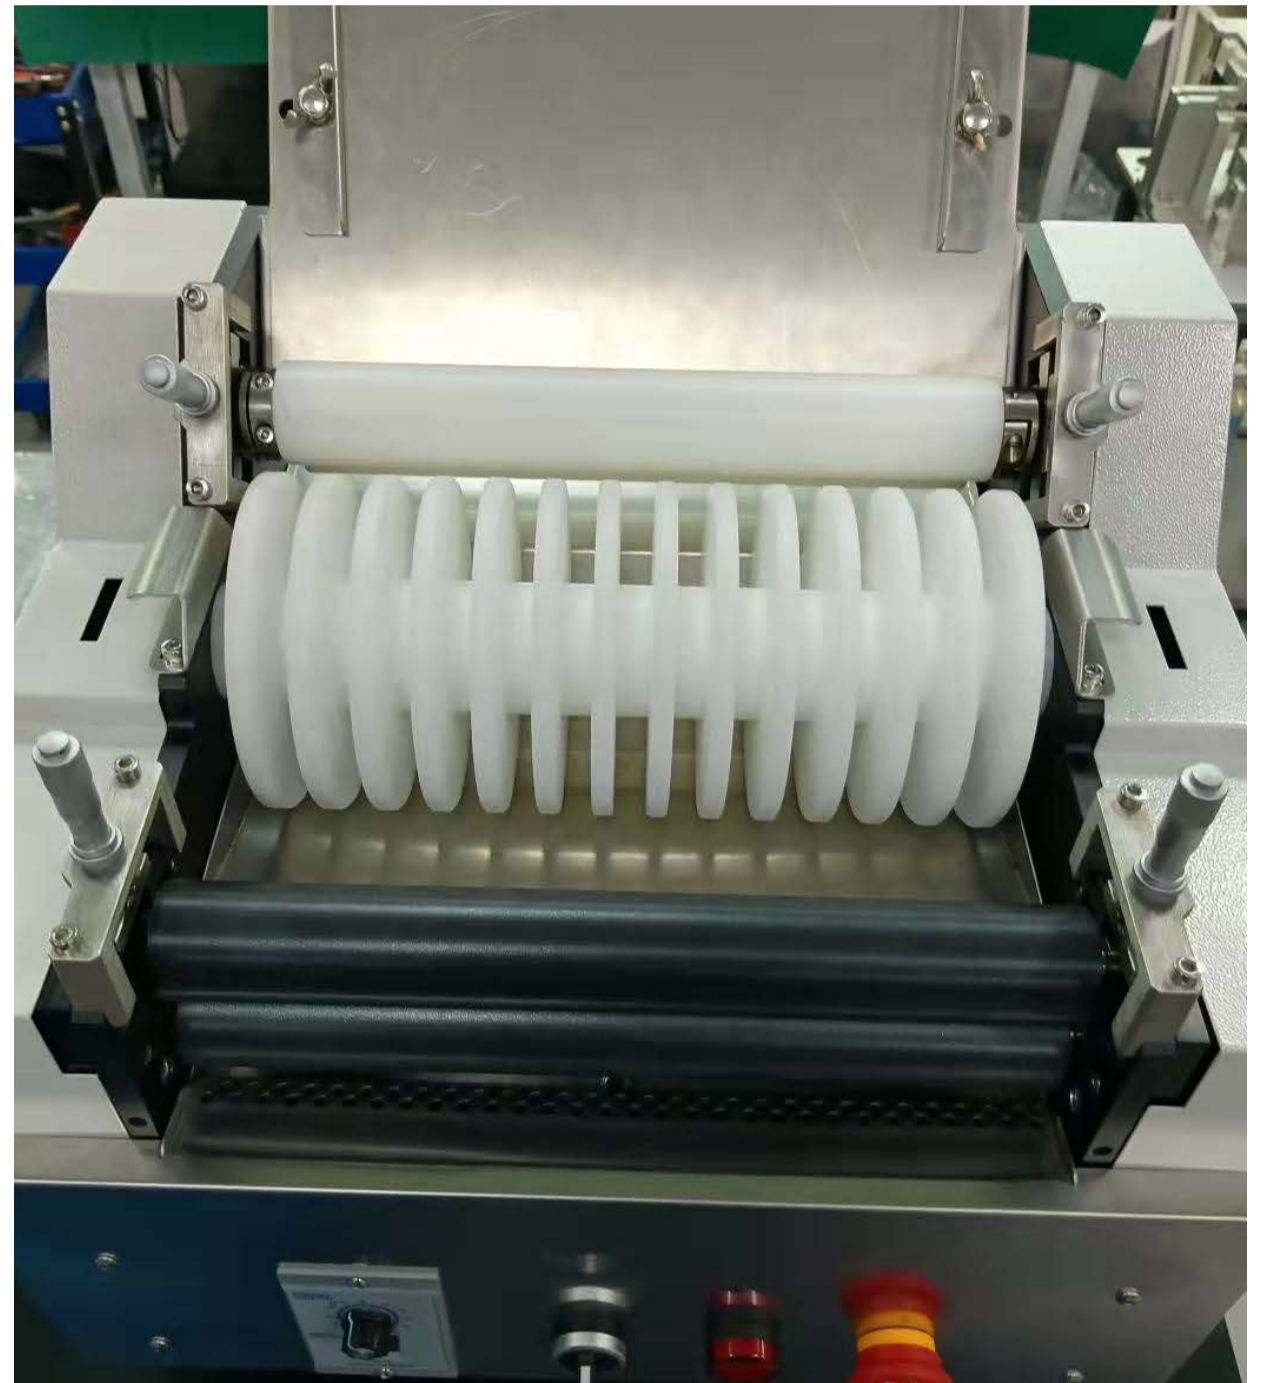

Workflow:

1. Manual insert sample pad
2. Auto feeding pad sheet
3. Immerse sheet evenly with buffer solution
4. Print out sample pad sheet

Features:

1. Speed adjustable
2. Easy to use like an office printer
3. Can use sheet format or strip pad format
4. Easy to large scale pretreat sample pad sheet before mass manufacturing

Parameter	
Power supply	AC 220V 50Hz
Power	40w
Dimension	450(L)*350(W)*257(H)mm
Sheet feeding speed	0-40RPM, adjustable
Interval time	0-1mm, adjustable
Sheet dimension	width 200mm MAX; length 300mm MAX
Sheet stepping	0.02mm
Liquid absorption	40.5 ± 5.0 g/sheet, adjustable